



# VT 100 Weight Indicator

## User's Guide





## Legal Notice

This manual contains information that is proprietary to Vishay Transducers Ltd. (“VT”). No part of this publication may be reproduced in any form whatsoever without prior written approval by VT.

Right, title and interest, all information, copyrights, patents, know-how, trade secrets and other intellectual property or other proprietary rights relating to this manual and to the VT 100 (“the Product”), and any software components contained therein, are proprietary products of VT protected under international copyright law and shall be and remain solely with VT.

VT 100 is a registered trademark of VT. No right, license, or interest to such trademark is granted hereunder, and you agree that no such right, license, or interest shall be asserted by you with respect to such trademark.

You shall not copy, reverse compile or reverse assemble all or any portion of the Manual or the Product. You are prohibited from, and shall not, directly or indirectly, develop, market, distribute, license, or sell any product that supports substantially similar functionality as the Product, based on or derived in any way from the Product. Your undertaking in this paragraph shall survive the termination of this Agreement.

This Agreement is effective upon your opening of the packaging of the Product, and shall continue until terminated. VT may terminate this Agreement upon the breach by you of any term hereof. Upon such termination by VT, you agree to return to VT the Product and all copies and portions thereof. For further information contact VT at the address below or contact your local distributor.

## Warranty

Vishay Transducers warrants all instruments it manufactures to be free from defect in materials and factory workmanship, and agrees to repair or replace any instrument that fails to perform as specified within one year after the date of shipment. Coverage of computers, cameras, rechargeable batteries, and similar items, sold in conjunction with equipment manufactured by Vishay Transducers and bearing the identifying name of another company, is limited under this warranty to one year after the date of shipment. The warranty on non-rechargeable batteries and similar consumable items is limited to the delivery of goods free from defects in materials and factory workmanship.

This warranty shall not apply to any instrument that has been repaired, worked on, or altered by persons unauthorized by Vishay Transducers in such a manner as to injure, in our sole judgment, the performance, stability, or reliability of the instrument; subjected to misuse, negligence or accident; or connected, installed, adjusted, or used otherwise than in accordance with the instructions furnished by us.

At no charge, we will repair, at our plant, or an authorized repair station, or at our option, replace any of our products found to be defective under this Warranty.

This Warranty is in lieu of any other warranties, expressed or implied, including any implied warranties of merchantability or fitness for a particular purpose. There are no warranties which extend beyond the description on the face hereof. Purchaser acknowledges that no salesman, agent, employee, or other person has made any such presentations or warranties or otherwise assumed for Vishay Transducers any liability in connection with the sale of any goods to the purchase. The Buyer hereby waives all rights Buyer may have arising out of any breach of contract or breach of warranty on the part of Vishay Transducers, to any incidental or consequential damages, including but not limited to damages to property, damages for injury to the person, damages for loss of use, loss of time, loss of profits or income, or loss resulting from personal injury.

Some states do not allow the exclusion or limitation of incidental or consequential damages for consumer products, so the above limitations or exclusions may not apply to you.

The Purchaser agrees that the Purchaser is responsible for notifying any subsequent Buyer of goods manufactured by Vishay Transducers of the warranty provisions, limitations, exclusions and disclaimers stated herein, prior to the time any such goods are purchased by such Buyer, and the Purchaser hereby agrees to indemnify and hold Vishay Transducers harmless from any claim asserted against or liability imposed on Vishay Transducers occasioned by the failure of the Purchaser to so notify such buyer. This provision is not intended to afford subsequent Purchasers any warranties or rights not expressly granted to such subsequent Purchasers under the law.

Vishay Transducers reserves the right to make any changes in the design or construction of its instruments at any time, without incurring any obligation to make any change whatever in units previously delivered. Vishay Micro-Measurement's sole liabilities, and Buyer's sole remedies, under this agreement shall be limited to the purchase price, or at our sole discretion, to the repair or replacement of any instrument that proves, upon examination, to be defective, when returned to our factory, transportation prepaid by the Buyer, within the applicable period of time from the date of original shipment. Return transportation charges of repaired or replacement instruments under warranty will be prepaid by Vishay Transducers.

Vishay Transducers is solely a manufacturer and assumes no responsibility of any form for the accuracy or adequacy of any test results, data, or conclusions which may result from the use of its equipment.

The manner in which the equipment is employed and the use to which the data and test results may be put are completely in the hands of the Purchaser. Vishay Transducers shall in no way be liable for damages, consequential or incidental, to defects in any of its products.

This warranty constitutes the full understanding between the manufacturer and buyer, and no terms, conditions, understanding or agreement purporting to modify or vary the terms hereof shall be binding unless hereafter made in writing and signed by an authorized official of Vishay Transducers.

## Safety Instructions

The following instructions serve as a general guide for the safe operation of the VT 100. This User's Manual is intended for users of the Weight Indicator, who are prohibited from installing, calibrating, setting up or servicing the product. Only qualified and authorized service personnel should install the product, set it up, calibrate it, or carry out adjustment, maintenance or repairs.

### Safety Symbols



This symbol indicates potential safety hazards regarding product operation or maintenance to the operator or service personnel.

### General Safety Practices

Do not touch or tamper with the power supply when the power cord is connected. Line voltages may be present even when the product is powered off or a fuse is blown.

Before working on equipment connected to power lines or to other devices, remove jewelry or any other metallic object that may come into contact with energized parts.

The product is intended to be grounded during normal use. Grounding is provided by connecting the mains plug to a wall socket with a protective earth terminal. The earth lug provided on the product should be connected to the protective earth at all times, by a wire with a diameter of 18 AWG or wider.

Always make the ground connection first and disconnect it last. Do not connect data cables to ungrounded equipment. Make sure that all other cables are disconnected before disconnecting the ground.

### Special Safety Warnings



Welding on or in the vicinity of the equipment is strictly prohibited.



Use reliable lightning conductors to prevent static loads caused by thunderstorms.

### Connection of AC Mains

Make sure that the electrical installation complies with local codes. Always connect the AC plug to a wall socket with a protective ground.

The maximum permissible current capability of the branch distribution circuit that supplies power to the product is 16A. The circuit breaker in the building installation should have high breaking capacity and must operate at short-circuit current exceeding 35A.

Always connect the power cord first to the equipment and then to the wall socket. If the power cord cannot be readily disconnected in case of emergency, make sure that a readily accessible circuit breaker or emergency switch is installed in the building.

### Operating Environment

Ambient Temperature	Storage temperature: -10C to +70C (14F to 158F). Operating temperature: -10C to +40C (14F to 104F).
Humidity	40% to 90% RH (non condensing).
Vibration	Severe vibration can affect the accuracy of weighing and damage components.
Air	The air surrounding the product should be dust-free and should not contain corrosive gasses or other materials that could adversely effect the product.
Electromagnetic Fields	Heavy electrical equipment should not be installed near to the weighing apparatus.
Incoming and Outgoing Signals	Relays and contacts connected to the equipment must have reliable and effective interference suppression. This also applies to other equipment within 3 meters of the equipment.

# Declaration of Conformity

## Non-Automatic Weighing Instrument (III)

Manufacturer	Vishay Transducers
Type/Model	VT 100
EC Type Approval Certificate Number	DK

Corresponds to the production model described in the EC Type Approval Certificate and to the requirements of the Council Directive 90/384/EEC as amended and to the requirements of the following EC Directives:

- EN 45501:1994, The Metrological Aspects of Non-Automatic Weighing Machines
- EN 55022:1987, Limits and Methods of Measurement of Radio Interference Characteristics of Information Technology Equipment
- EN 60950:1992, Safety of Information Technology Equipment

Date	Jun 1, 2004
Signature	Benny Shaya, Director R&D/Operations Instruments Being the responsible person employed and appointed by Vishay Transducers.

# Contents

---

## CHAPTER 1 INTRODUCTION

---

1.1	Operating Modes .....	1
1.2	Getting to Know the Indicator .....	1
1.2.1	Front View .....	1
1.2.2	LED Annunciators.....	2
1.2.3	Rear View .....	2
1.2.4	Setup Switch .....	2
1.3	Indicator Operations .....	3
1.3.1	Weighing Mode Operations .....	3
1.3.2	Front Panel Buttons.....	4

---

## CHAPTER 2 INSTALLATION

---

2.1	Power Connector.....	5
2.2	Serial/Print Connector and Digit Input .....	5
2.3	Voltage Driven Printer .....	6
2.4	Current Driven Printer (20 mA).....	6
2.5	Load Cell Connections .....	6

---

## CHAPTER 3 CONFIGURATION MODE OPERATIONS

---

3.1	Configuration Menu .....	8
3.2	Format Menu .....	10
3.3	CALIBRATION.....	12
3.3.1	Calibration Menu .....	12
3.3.2	Calibrating VT 100.....	13
3.4	SERIAL Menu.....	15
3.5	PROGRAM Menu .....	17
3.6	PRINT FORMAT Menu.....	18
3.7	TIME Menu .....	19
3.8	DATE Menu .....	20
3.9	VERSION Menu .....	20

---

## CHAPTER 4 TEST MODE OPERATIONS

---

TEST MODE OPERATIONS .....	21
----------------------------	----

---

## CHAPTER 5 PANEL MODE OPERATIONS

---

PANEL MODE OPERATIONS.....	22
----------------------------	----

---

## CHAPTER 6 PRINT FORMATS

---

6.1	Print Format Commands .....	24
6.2	Edit Using Any Editor Through EDP .....	24
6.3	Use Front Panel Editing.....	24

---

## **APPENDIX A ELECTRONIC DATA PROCESSING COMMANDS**

---

A.1	GENERAL Commands .....	25
A.2	CONFIGURATION Commands .....	25
A.3	FORMAT Commands .....	26
A.4	PROGRAM Commands .....	26
A.5	SERIAL Commands .....	26
A.6	REGULATION .....	27
A.7	PRINT FORMAT Commands .....	27
A.8	RESET Commands .....	27
A.9	A/D Commands .....	28
A.10	Key Button on EDP Commands .....	28
A.11	Other Commands .....	28

---

## **APPENDIX B CONVERSION FACTORS AND CONTINUOUS OUTPUT FORMAT**

---

Conversion Factors .....	29
COS Format .....	29

---

## **APPENDIX C ASCII SET AND SPECIFICATIONS**

---

ASCII Character Set .....	30
---------------------------	----

---

## **APPENDIX D ERROR MESSAGES**

---

Error Message Table .....	32
---------------------------	----

---

## **APPENDIX E FRONT PANEL DISPLAY CHARACTERS**

---

Character Map for Front Panel Display .....	33
---	----

---

## **SPECIFICATIONS**

---

VT-100 Detailed Specifications .....	34
--------------------------------------	----

---

## **TECHNICAL SUPPORT**

---



---

## CHAPTER 1 INTRODUCTION

---

The VT 100 Weight Indicator is a single-channel digital weight indicator. The indicator front panel consists of six bright, 7-segment LED digits and a five-button keypad. The prominent features include:

- Four and six-wire load cell support connections
- OIML approved
- Two configurable digital inputs
- Electronic Data Processing Port (EDP) for full duplex, RS-232 communications at up to 9600 bps
- Printer port for output only RS-232 and 20 mA current loop communications at up to 9600 bps
- Available in 115 VAC and 230 VAC versions

### 1.1 Operating Modes

The VT 100 indicator has four modes of operation.

Mode	Description
Normal (Weighing Mode) - See Chapter 2 for more information.	Also known as weighing mode. The display shows measured weights in the units required.
Setup (Configuration) Mode - See Chapter 3 for more information.	Configuration mode allows users to modify parameter values and calibrate the indicator.
Test Mode - See Chapter 4 for more information.	Test mode performs diagnostic functions for the indicator.
Panel Mode - See Chapter 5 for more information.	Panel mode provides access to time, date, sequential numbering for print operations and the initial consecutive number value. This is all done without the need to press the "setup switch."

### 1.2 Getting to Know the Indicator

#### 1.2.1 Front View

The following figure shows the LED display and the five button keypad.

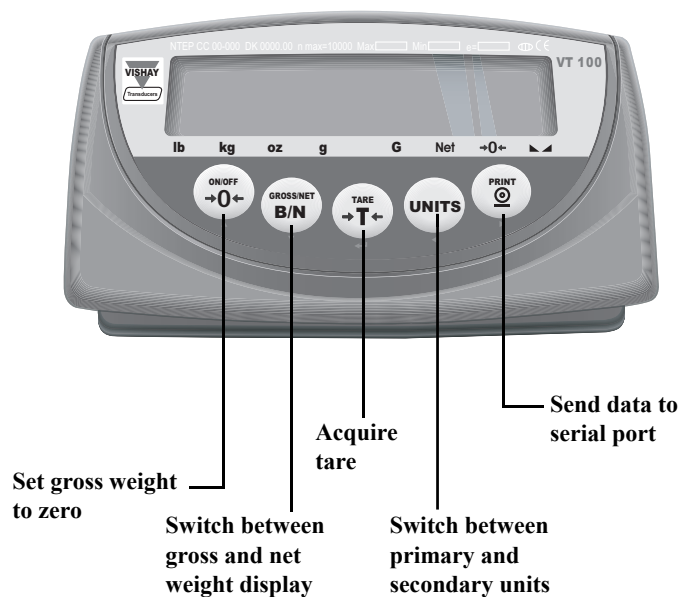


Figure 1-1: Front View

## Introduction

### 1.2.2 LED Annunciators

The VT 100 indicator uses a set of eight LED annunciators to provide additional information about the value being displayed.

- Gross (**G**) and Net (**Net**): Shows whether the displayed weight is a gross or net weight.
- Center of Zero ( $\rightarrow 0 \leftarrow$ ): Gross weight is within 0.25 graduations of zero.
- No Motion ( $\nabla$ ): Scale is motionless or within the specified motion band. Some operations including tare function and printing can be done only when the no motion symbol is lit.
- Units (**kg**, and **g**): Indicate the units of the displayed value: kg=kilograms, and g=grams.

The displayed units can also be set to short tonnes (tn), metric tonnes (t) or NONE (no unit information is displayed). The kg and g LEDs function as primary and secondary unit annunciators for some combinations of primary and secondary units. If neither primary or secondary units are lb, kg, oz. or g, the lb annunciator is lit for primary units and kg for secondary units.

**Note: In OIML approved applications, weighing is done in kg and g only.**

### 1.2.3 Rear View

The rear view of the indicator is shown in the following figure:

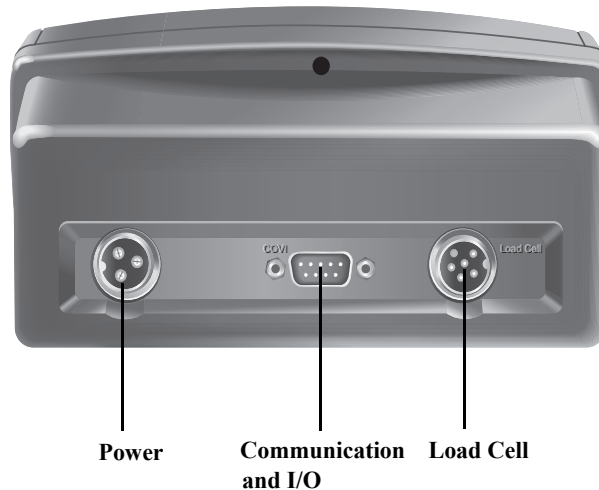


Figure 1–2: Rear View

### 1.2.4 Setup Switch

The following figure displays the setup switch location:

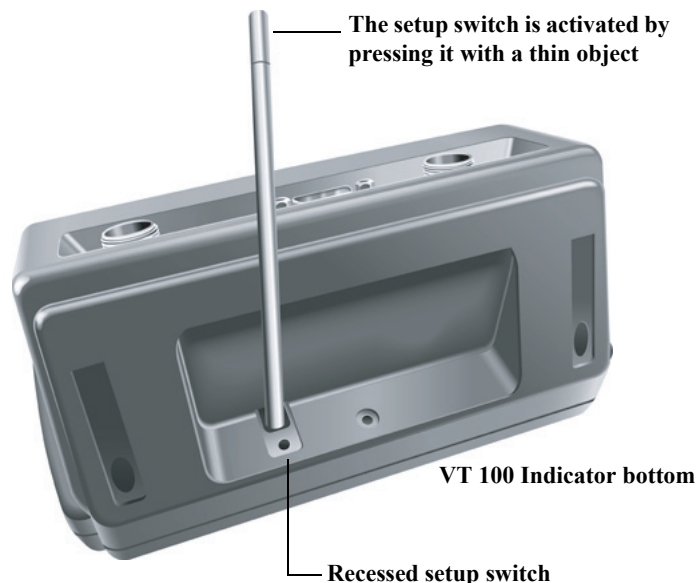


Figure 1–3: Setup Switch

The setup switch can only be activated by using a thin object to press it as shown in Figure 1-3.

The setup switch is used for entering configuration and calibration modes. In this mode, different parameters of the weight indicator can be configured and calibrated.

**Note: This operation should be performed only by a qualified technician; calibration of the indicator may be disqualified if performed by anyone else. The indicator should always be sealed after initial configuration. Sealing materials can be non-reversible lead seals or stickers.**

## 1.3 Indicator Operations

### 1.3.1 Weighing Mode Operations

The basic operations of the VT 100 are summarized below:

#### Toggle Gross/Net Mode

Press the GROSS/NET key to switch the display mode from gross to net or from net to gross. If a tare value has been entered or acquired, the net value is the gross weight minus the tare.

Gross mode is shown by the **Gross** annunciator, the net mode is shown by the **Net** annunciator.

#### Toggle Units

Press the UNITS key to switch between primary and secondary units. The units LED to the right of the display is lit.

#### Zero Scale

1. In gross mode, remove all weight from the scale and wait for the no motion annunciator (⏏).
2. Press the ZERO key. The center of zero (→0←) annunciator lights to indicate that the scale is zeroed.

#### Acquire Tare

1. Place container on scale and wait for the no motion annunciator (⏏).
2. Press the TARE key to acquire the tare weight of the container. The indicator switches to net mode.

#### Remove Stored Tare Value

1. Remove all weight from the scale and wait for the no motion annunciator (⏏).
2. Press the TARE key. The indicator switches to gross mode, indicating that the tare value has been removed.






#### Print Ticket

1. Wait for the no motion annunciator (⏏).
2. Press the PRINT key to send data to the serial port.

## Introduction

### 1.3.2 Front Panel Buttons

The front panel buttons are shown in the following table:

Button	Normal	Setup	Test
	Sets the gross weight to zero.	Functions as the up arrow button and is used to move one level up the menu hierarchy	Functions as the up arrow button and is used to move one level up the menu heirarchy.
	Switches between gross and net weight displays.	Functions as the down arrow button and is used to move one level down the menu hierarchy.	Functions as the down arrow button and is used to move one level down the menu heirarchy.
	Used to set tare load.	Functions as the ENTER button and is used to confirm selection.	Functions as the ENTER button and is used to confirm selection.
	Toggles the display between primary and secondary units.	Functions as the left arrow button and is used to select the menu item on the left at the same menu level.	Functions as the left arrow button and is used to select the menu item on the left at the same menu level.
	Sends data to the serial port.	Functions as the right arrow button and is used to select the menu item on the right at the same menu level.	Functions as the right arrow button and is used to select the menu item on the right at the same menu level.

## CHAPTER 2 INSTALLATION

This section describes procedures for connecting the weight indicator to digital inputs and serial communication cables.



### CAUTION

This weighing scale has no power switch. Turn off the power outlet or disconnect the power cord to turn off the weighing scale. The weighing scale must be installed near an easily accessible power outlet.

The various sockets on this weight indicator are shown in the following figure:


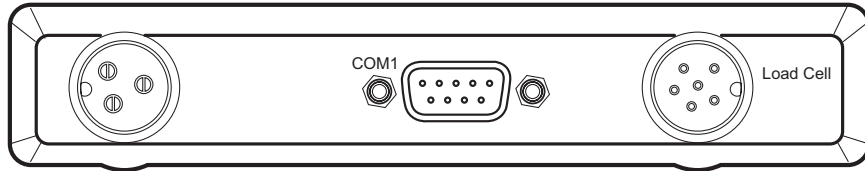


Figure 2-1: Cable Connections

### 2.1 Power Connector

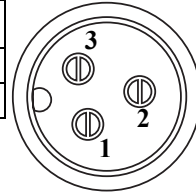The following table details the power connector pin function:

Pin	Designation	Function
3	+9V	Power Source
1	GND	Power Return



### 2.2 Serial/Print Connector and Digit Input

The following table details the serial pin connector functions:

Port	Pin	Designation	Function
EDP Port	3	EDP RX	RS232 receive data
	2	EDP TX	RS232 transmit data
	5	EDP GND	RS232 ground
Print Port	1	PR:TX	RS232 transmit data
	9	PR:20mA	+20mA OUT

The RS 232 EDP port connections are shown in the following figure:

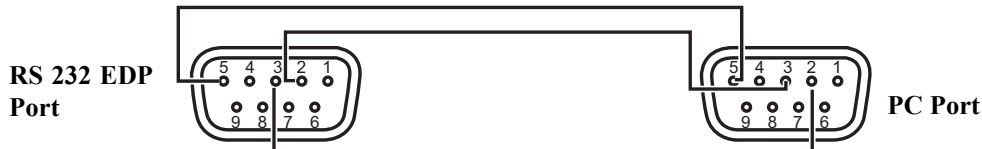


Figure 2-2: RS232 EDP Port Connections

Port	Pin	Designation	Function
VT 100 Port	5	EDP GND	RS232 ground
	3	EDP RX	RS232 receive data
	2	EDP TX	RS232 transmit data
PC Port	5	EDP GND	RS232 ground
	2	EDP TX	RS232 transmit data
	3	EDP RX	RS232 receive data

The VT 100 indicator provides two different serial output methods for the printer - either voltage or current.

## Installation

### 2.3 Voltage Driven Printer

The details of the voltage driven printer output are shown in the following figure:



Figure 2-3: Voltage Driven Printer Output

### 2.4 Current Driven Printer (20 mA)

The details of the current driven printer output are shown in the following figure:

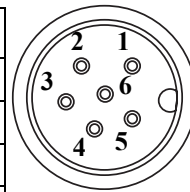


Figure 2-4: Current Driven Printer

### 2.5 Load Cell Connections

The following table shows the load cell connector pin functions.

Pin	Functions
PIN1	LOAD CELL SIGNAL +
PIN2	LOAD CELL EXCITATION +
PIN3	LOAD CELL SENSE +
PIN4	LOAD CELL EXCITATION -
PIN5	LOAD CELL SENSE -
PIN6	LOAD CELL SIGNAL -



See Figure 6-Wire Load Cell Application on page 6 and 4-Wire Load Cell Application on page 6.

#### Connections of a 6-Wire Load Cell Application

The relevant connections are shown in Figure 2-5:

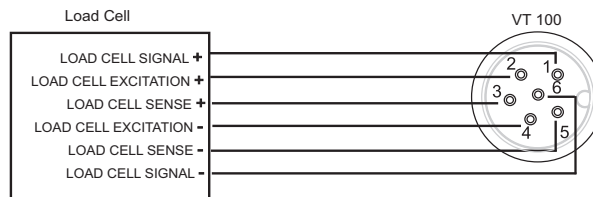


Figure 2-5: 6-Wire Load Cell Application

#### Connections of a 4-Wire Load Cell Application

The relevant connections are shown in Figure 2-6:


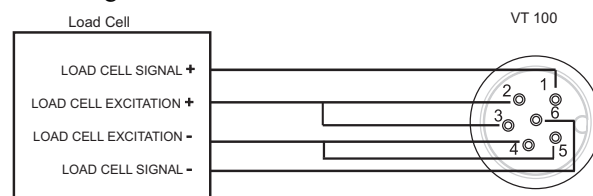


Figure 2-6: 4-Wire Load Cell Application

## CHAPTER 3 CONFIGURATION MODE OPERATIONS

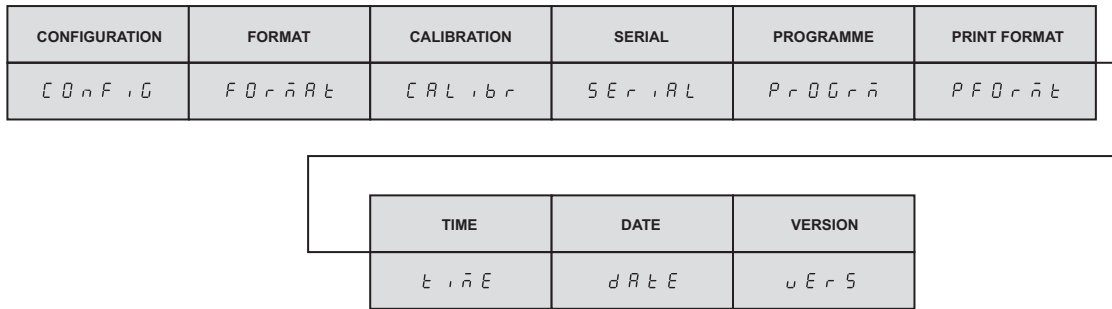The following sections provide graphic representations of the indicator menu structures. The top level menu structure of the weight indicator is as follows:




The following table gives a brief introduction to what each menu item does:


**Table 3-1: Menu Structure**

Main Menu	Function
CONFIGURATION Menu	Sets parameters affecting the weighing function: <ul style="list-style-type: none"> <li>• ADC programmable-gain-amplifier value</li> <li>• Number of full scale graduations</li> <li>• Range within which the scale can be zeroed</li> <li>• Change in load at which the scale will exit the stable condition</li> </ul>
FORMAT Menu	Sets the format for calculation and display of various units like: <ul style="list-style-type: none"> <li>• Primary and secondary units</li> <li>• Multiplier exponent</li> <li>• Rate at which the display is refreshed</li> </ul>
CALIBRATION Menu	Calibrates the indicator
SERIAL Menu	Configures the parameters of the serial port
PROGRAM Menu	Sets power-up mode, regulatory mode and consecutive number values
PRINT FORMAT Menu	Sets the print format used for gross and net tickets
TIME Menu	Sets the current time
DATE Menu	Sets the current date
VERSION Menu	Displays the installed software version number

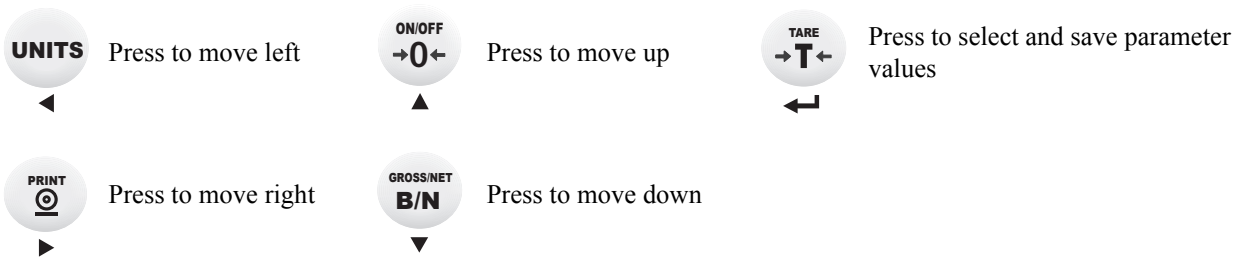The front panel buttons are used as directional buttons to navigate through the menus in setup mode.



A label under each of these buttons identifies the direction provided by the button as shown:

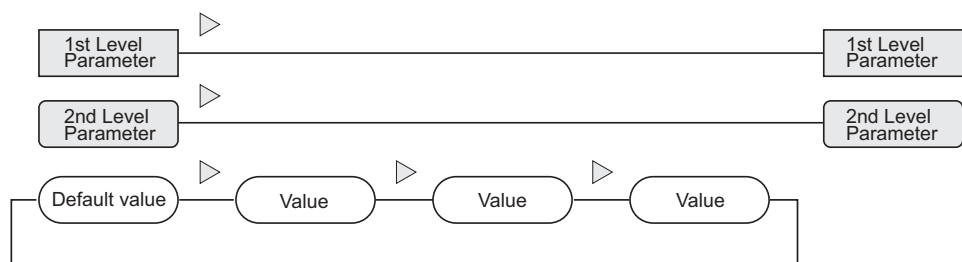

**Figure 3-1: Navigating the Setup Menus**

### 3.1 Configuration Menu

C O N F I G

Use this mode to configure the parameters of the weighing scale. To configure items from this menu, press the setup switch. The configuration menu is shown below:

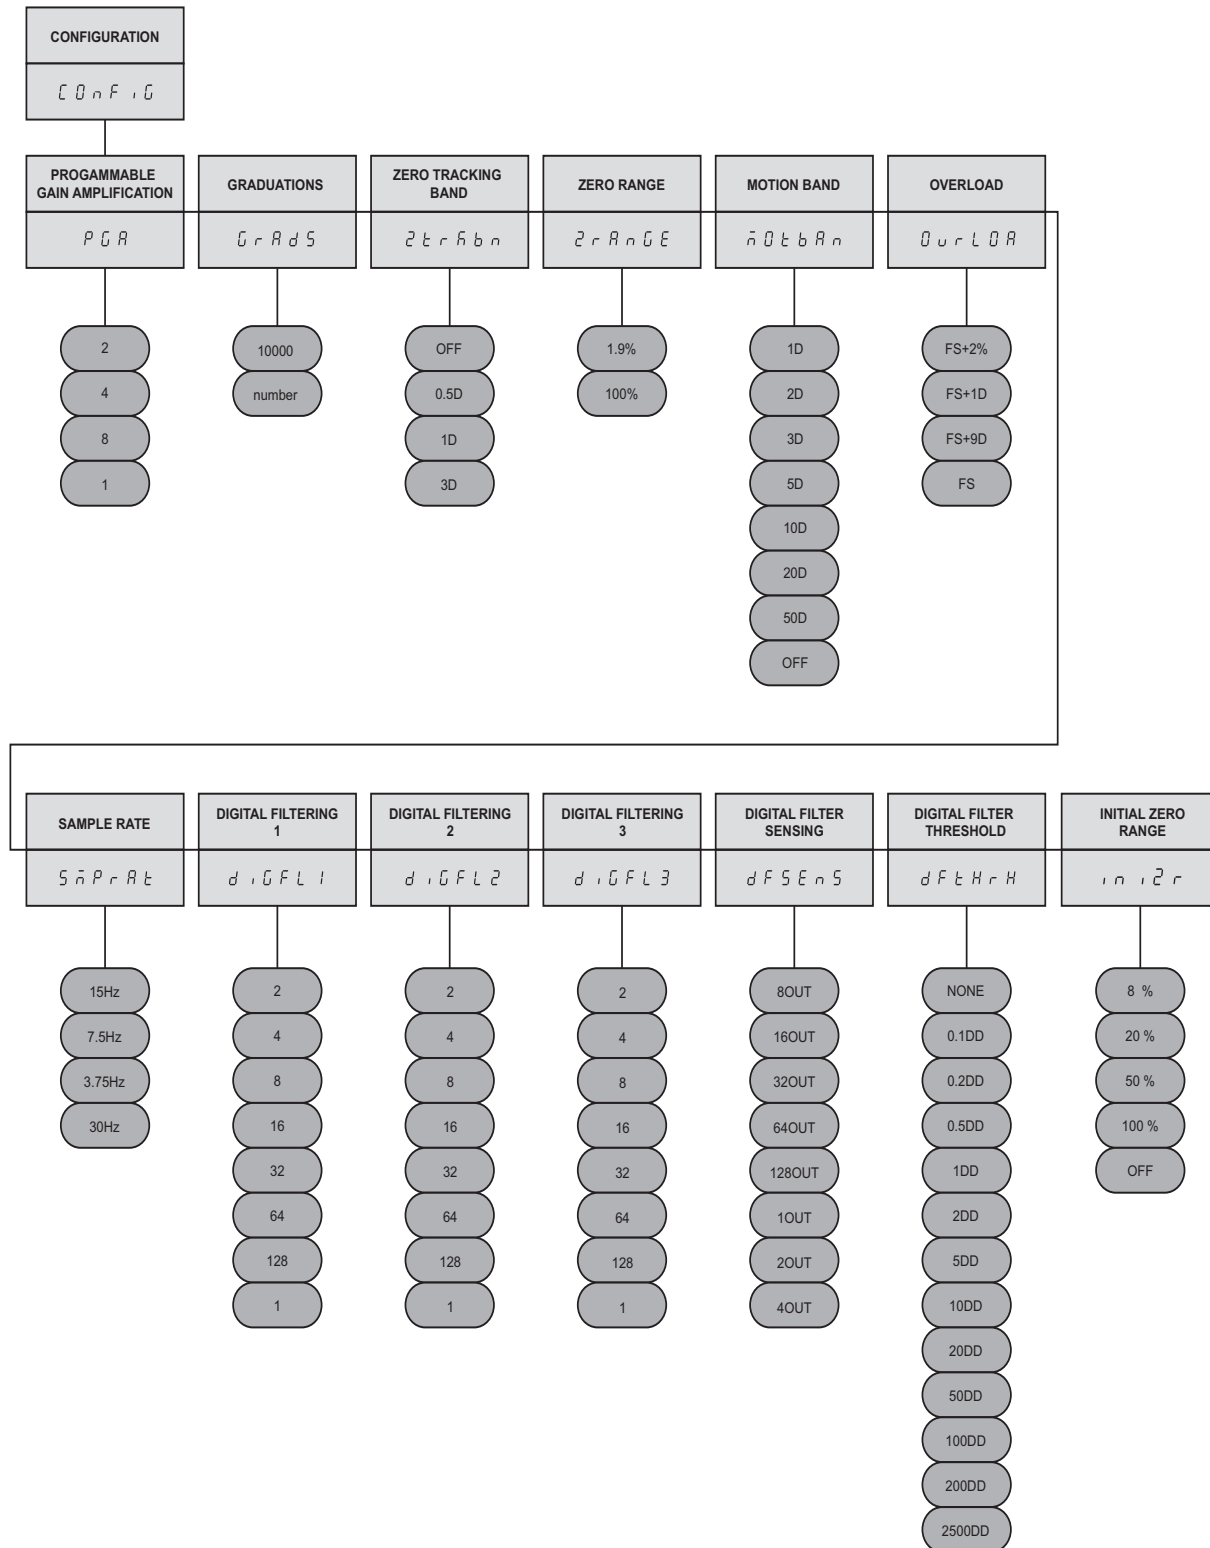


Figure 3-2: Configuration Menu



The following table describes the various configuration options (values in bold are default values):

**Table 3–2: Configuration Options**

Parameter	Options	Description
PROGRAMMABLE GAIN AMPLIFICATION <b>P G A</b>	1 2 4 8	Defines the ADC programmable-gain-amplifier value. -0.5mv/v to 4.5mv/v PGA=1 -0.2mv/v to 2.2mv/v PGA=2 -0.1mv/v to 1.1mv/v PGA=4 -0.05mv/v to 0.6mv/v PGA=8
GRADUATIONS <b>G r A d S</b>	<b>10000</b> Number	The value entered must be in the range 1 ~ 100000 and should be consistent with legal requirements and environmental limits on system resolution. To calculate GRADS, use the formula: Grads = Capacity/Display Division Display divisions for primary and secondary units are specified on the FORMAT menu.
ZERO TRACKING BAND <b>Z e r o B a n d</b>	<b>OFF</b> 0.5D 1D 3D.	This automatically zeros the scale when the input drifts slowly within the specified range and speed as defined by the parameter which covers the upper and lower limits. The maximum legal value is dependant on local regulations.
ZERO RANGE <b>Z e r o R a n g e</b>	<b>100%</b> 1.9% OFF	This is the range within which the scale can be zeroed. For example, if this value is set to 1.9%, it means that the zero range is $\pm 1.9\%$ around the calibrated zero point, for a total range of 3.8%. The indicator must be in stable condition to zero the scale. Use 1.9% for legal-for-trade applications. 100% indicates the scale can be zeroed at any load.
MOTION BAND <b>M o t i o n B a n d</b>	<b>1D</b> 2D 3D 5D 10D 20D 50D OFF	Defines the change in load at which the scale will exit a stable condition (motion condition). If motion is not detected for more than 1 second, the stability annunciator lights. The motion band value must satisfy local regulations.
OVERLOAD <b>O v e r l o a d</b>	FS+1D FS+9D FS <b>FS+2D</b> (FS=full scale)	Defines the point of overload. The display indicates "-----" when the point of overload is reached. The maximum legal value varies depending on legal regulations.
SAMPLE RATE <b>S a m p l e R a t e</b>	3.75 Hz 7.5 Hz <b>15 Hz</b> 30 Hz.	Defines the Analogue-to-Digital converter sampling rate. Lower sample rate values provide better signal noise immunity.
DIGITAL FILTER 1/2/3 <b>d i g i t a l F i l t e r 1</b> <b>d i g i t a l F i l t e r 2</b> <b>d i g i t a l F i l t e r 3</b>	1 <b>2</b> 4 8 16 32 64 128.	Defines the digital filtering rate used to reduce the effects of mechanical vibration. Choices indicate the number of A/D conversions that are averaged to obtain the displayed reading. A higher number gives a more stable display by minimizing the effect of a few noisy readings, but slows down the setting rate of the indicator.
DIGITAL FILTER CUTOUT SENSITIVITY <b>d i g i t a l F i l t e r S e n s i t i v i t y</b>	1 2 4 <b>8</b> 16 32 64 128.	Defines the number of consecutive readings that must fall outside the filter threshold (defined by DFTHR) before digital filtering is suspended.
DIGITAL FILTER CUTOUT THRESHOLD <b>d i g i t a l F i l t e r T h r e s h o l d</b>	<b>NONE</b> 2DD 5DD 10DD 20DD 50DD 100DD 200DD 250DD.	Specifies the filter threshold in display divisions. When a specified number of consecutive scale readings (DFSENS parameter) fall outside this threshold, digital filtering is suspended. If NONE is selected, the filter is always enabled.
INITIAL ZERO RANGE <b>i n i t i a l Z e r o R a n g e</b>	<b>8%</b> 20% 50% 100% OFF	Defines the range within which the scale can be zeroed while power is on. Each range is a plus or minus value. For example, 8% means $\pm 8\%$ around the calibrated zero point, for a total range of 16%.

### 3.2 Format Menu

*F O r m a t*

The items in this menu are used to configure the format for calculation and display of various units. To configure items from this menu, enter configuration mode and then press the right arrow button once.

The Format menu is shown below:

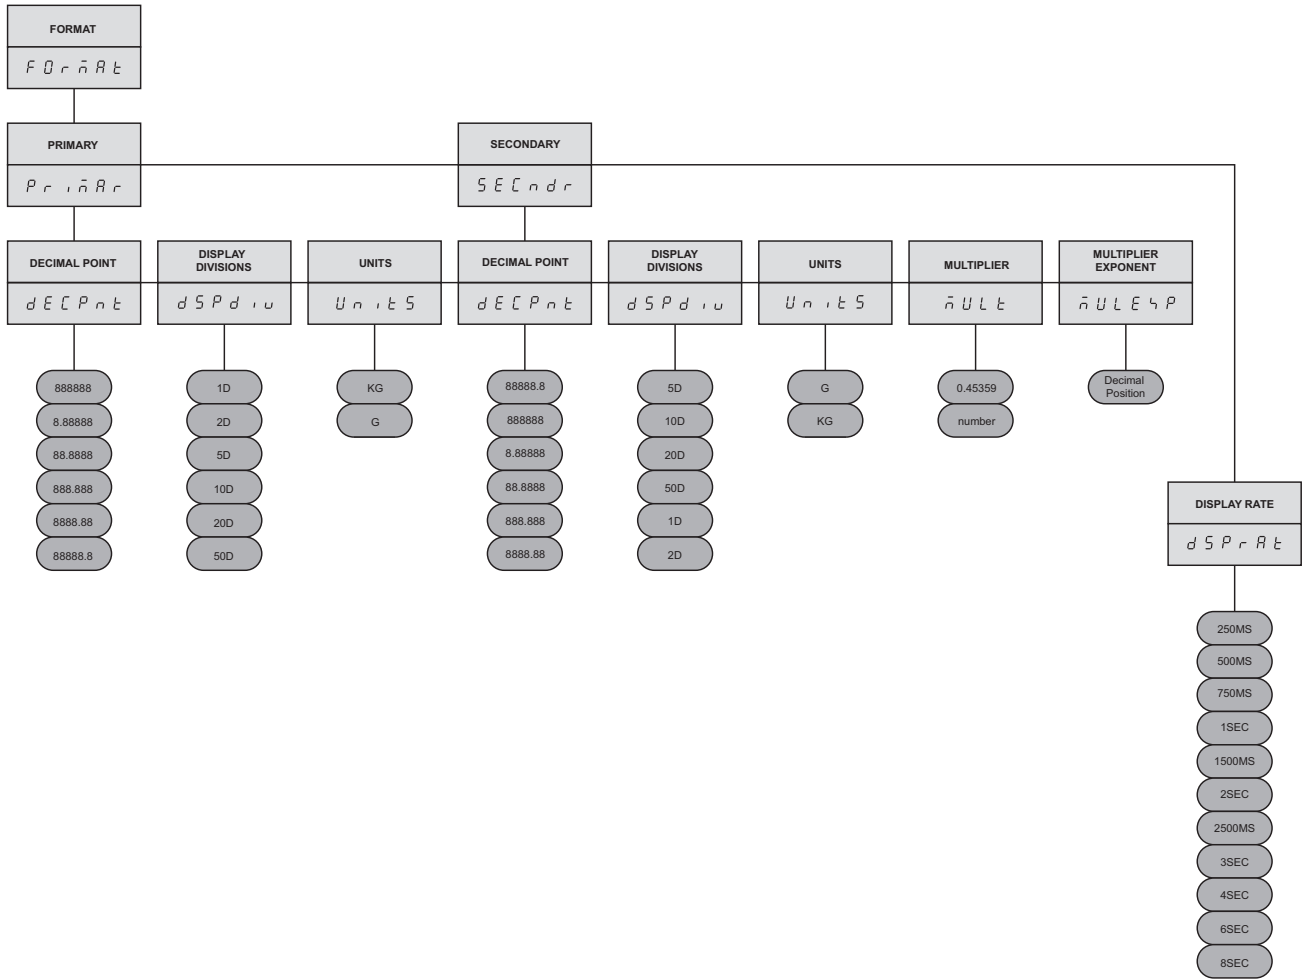


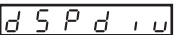
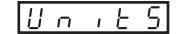
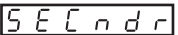


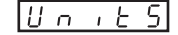





Figure 3–3: Format Menu

The following table describes the various format options (values in bold are default values):

**Table 3-3: Format Options**

Parameter	Options	Description
<b>PRIMARY</b> 	DECPNT (DECIMAL POINT) DSPDIV (DISPLAY DIVISION) UNITS (UNITS)	Specifies the <b>Primary</b> decimal position, display divisions, and units used for the primary units.
DECIMAL POINT 	<b>888888</b> 88888.8 8888.88 888.888 88.8888 8.88888	<b>Decimal Point</b> defines the location of the decimal point or dummy zero for the primary unit display. The value set should be consistent with local legal requirements.
DISPLAY DIVISIONS 	<b>1D</b> 2D 5D 10D 20D 50D	<b>Display Division</b> defines the minimum division size for the weight displayed by the primary units.
UNITS 	<b>KG (KILOGRAM)</b> G (GRAM)	This defines the primary <b>Units</b> for display and printing.
<b>SECONDARY</b> 	DECPNT (DECIMAL POINT) DSPDIV (DISPLAY DIVISION) UNITS (UNITS) MULT (MULTIPLIER) MULEXP (MULTIPLIER EXPONENT)	Specifies the <b>Secondary</b> decimal position, display divisions, and units used for the secondary units.
DECIMAL POINT 	<b>88888.8</b> 8888.88 888.888 88.8888 8.88888 888888	<b>Decimal Point Location</b> defines the location of the decimal point or dummy zero for the primary unit display. The value set should be consistent with local legal requirements.
DISPLAY DIVISIONS 	1D 2D <b>5D</b> 10D 20D 50D	<b>Display Divisions</b> defines the minimum division size for the weight displayed by the secondary units.
UNITS 	<b>G (GRAM)</b> KG (KILOGRAM)	This defines the secondary <b>Units</b> for display and printing.
MULTIPLIER 	<b>0.45359</b> Number	<b>Multiplier</b> defines the conversion factor by which the primary units are multiplied to obtain the secondary units. Secondary unit = Primary unit * MULT. Use the MULEXP parameter to shift the decimal position of the multiplier. To toggle between primary and secondary units, use the UNITS key.
MULTIPLIER EXPONENT 	DECIMAL POSITION	<b>Multiplier Exponent</b> specifies a divisor used to shift the decimal position in the secondary units multiplier value.
DISPLAY RATE 	<b>250 MS</b> 500 MS 750 MS 1 SEC 1500 MS 2 SEC 2500 MS 3 SEC 4 SEC 6 SEC 8 SEC	<b>Display Rate</b> - sets the update rate for displayed values.

### 3.3 CALIBRATION

CALibr

#### 3.3.1 Calibration Menu

This menu is used to calibrate the indicator. To configure items from this menu, enter configuration mode and then press the right arrow button twice.

CAL indicates that the machine is calibrating the selected value.

The Calibration menu is shown below:

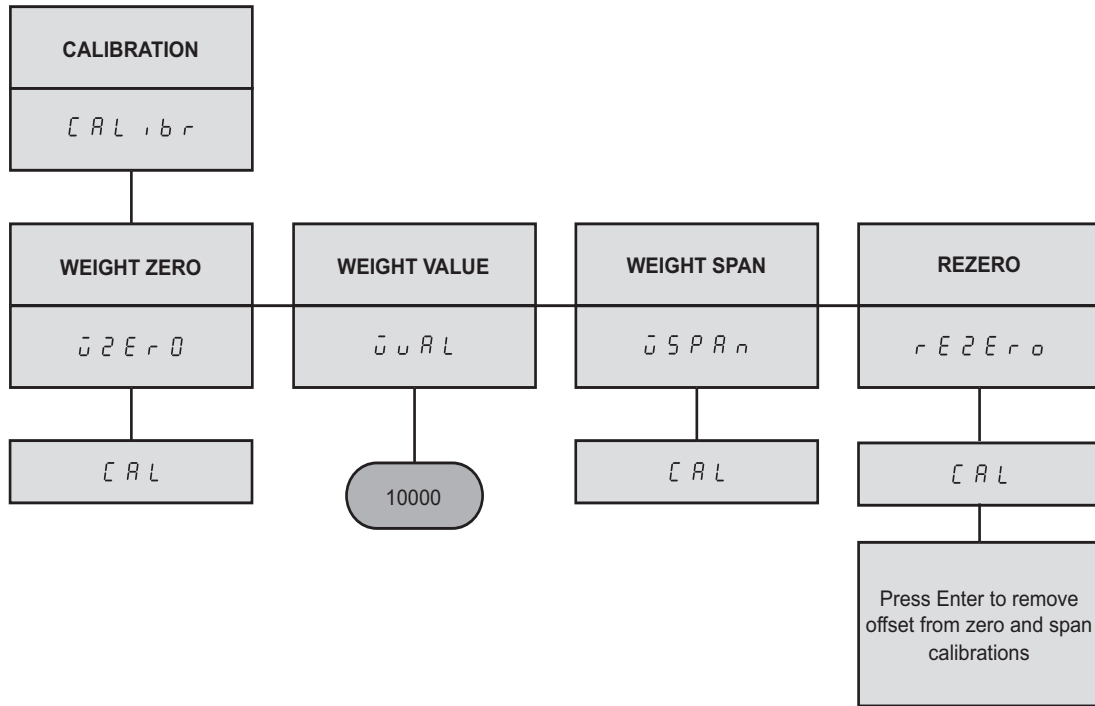


Figure 3-4: Calibration Menu

The following table describes the various calibration options (values in bold are default values).

















Table 3-4: Calibration Options






Parameter	Options	Description
WEIGHT ZERO WZEr0	NONE	
WEIGHT VALUE WVAL	<b>10000</b>	Displays and edits the test weight value.
WEIGHT SPAN WSPAn	NONE	Displays span calibration weight value.
REZERO rEzEr0	NONE	Removes an offset value from the zero and span calibrations. Use this setting only after WZERO and WSPAN have been set.

### 3.3.2 Calibrating VT 100

The VT 100 indicator can be calibrated using the front panel.

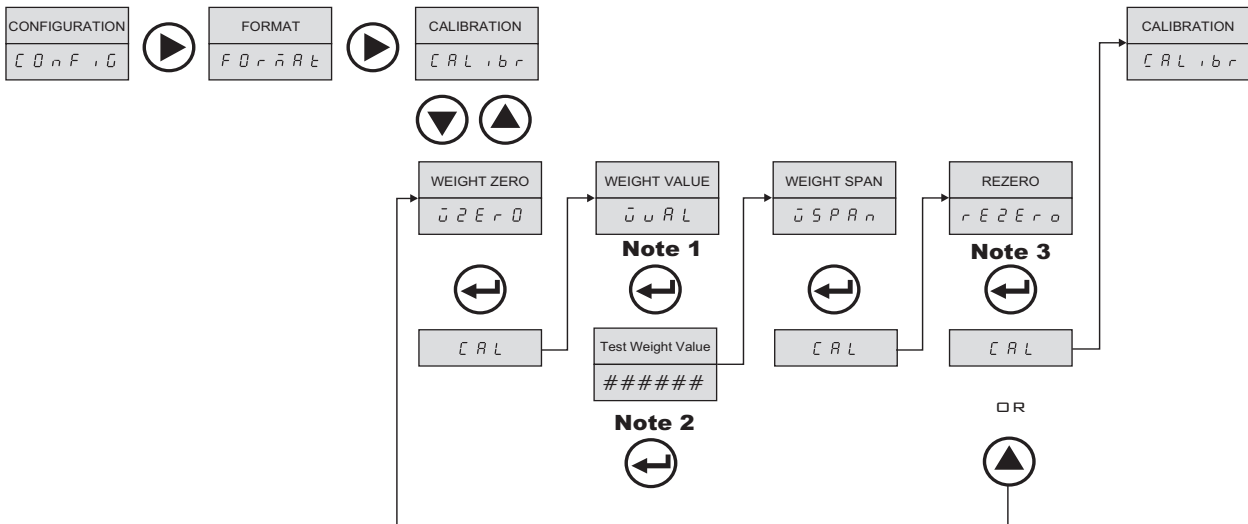
To calibrate the indicator, do the following:

1. Place the indicator in SETUP mode by pressing the push button in the back (See figure 1-3). The display reads "CONFIG." Remove all weight from the scale platform. If your test weights require hooks or chains, place the hooks or chains on the scale for zero calibration.
2. Press  until the display reads "CALIBR." Press  to navigate to zero calibration ("WZERO").
3. With "WZERO" displayed, press  to calibrate zero. The indicator displays "CAL" while calibration is in progress. When complete, "WVAL" is displayed.
4. With "WVAL" displayed, place test weights on the scale and press  to show the test weight value. Press  again; the last digit of the displayed value flashes. Press  or  to change the digit selected. Press  and  to increment or decrement the value of the selected digit. Press  to save the test weight value and navigate to span calibration ("WSPAN").
5. With "WSPAN" displayed, press  to calibrate span. The indicator displays "CAL" while calibration is in progress. When complete, "REZERO" is displayed.
6. Optional: The rezero function is used to remove a calibration offset when hooks or chains are used to hang the test weights.
  - If no other apparatus was used to hang the test weights during calibration, remove the test weights and press  to return to "CALIBR" menu.
  - If hooks or chains were used during calibration, remove these and all test weights from the scale. Press  to rezero the scale. This function adjusts the zero and span calibration values. When complete "WZERO" is displayed. Press the  button to return to "CALIBR" menu.
7. Press the  button until the display reads "CONFIG", then press  to exit setup mode.

**Note: When editing numeric values, press  or  to change the digit selected. Press  or  button to increment or decrement the selected digit. Press  to save the value entered and return to the level above. In case of a mistake, the whole process can be repeated to obtain proper calibration.**

## Configuration Mode Operations

The calibration process is depicted in the following figure:



**Note 1:** Place test weights.

**Note 2:** Use arrow key, see figure 3-1 to set maximum weight value.

**Note 3:** Optional – use only when hooks or chains were used during calibration.  
To recalibrate zero, remove these and the test weights from the scale.

**Figure 3–5: Calibration Process**

### 3.4 SERIAL Menu

S E R I A L

The items in this menu are used to configure the serial port used for transferring data between the indicator and a PC or printer. To configure items in this menu, press the setup switch and then the right arrow button three times.

The Serial menu is shown below:

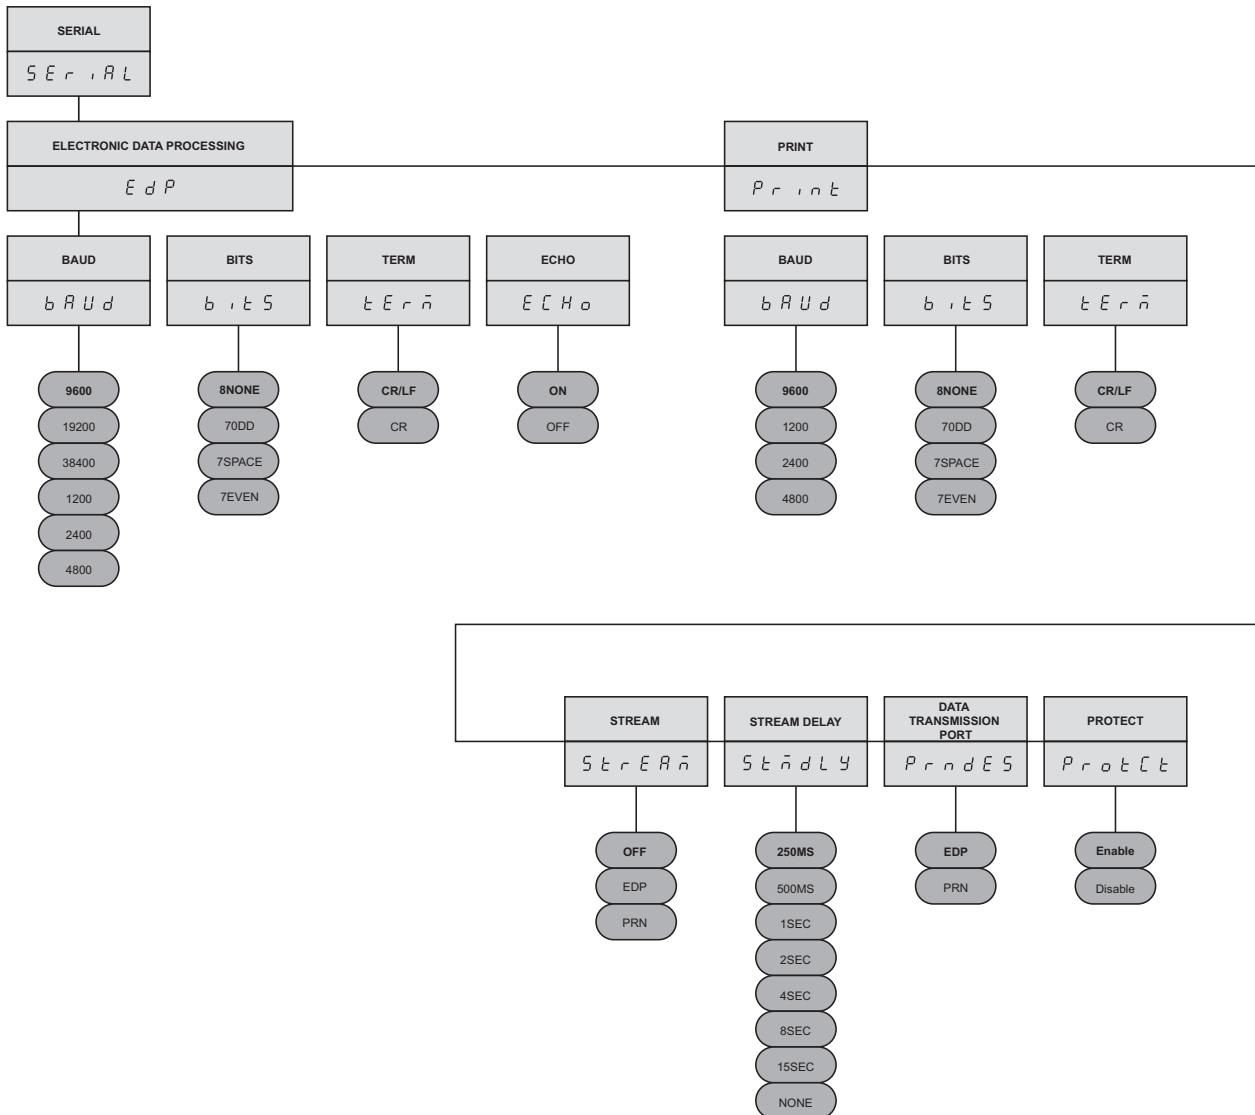


Figure 3-6: Serial Menu

## Configuration Mode Operations

The following table describes the various serial options (values in bold are default values).

**Table 3–5: Serial Options**

Parameter	Options	Description
ELECTRONIC DATA PROCESSING <code>EDP</code>	BAUD BITS TERM	Specifies port settings for baud rate, data bits, termination characters, and end-of-line delay used by the <b>EDP port</b> .
BAUD <code>BAUD</code>	<b>9600</b> 19200 38400 1200 2400 4800	<b>Baud Rate.</b> Selects the transmission speed for the EDP port.
BITS <code>bits</code>	<b>8NONE</b> 7ODD 7EVEN 7SPACE	Selects number of data <b>bits</b> and parity of data transmitted from the EDP port.
TERMINATION <code>Termin</code>	<b>CR/LF</b> CR	Selects the <b>termination character</b> for data sent from the EDP port.
ECHO <code>ECHO</code>	<b>ON</b> OFF	Specifies whether commands sent to the indicator are <b>echoed</b> .
PRINT <code>Print</code>	BAUD BITS TERM	Specifies port settings for baud rate, data bits, termination characters, and end-of-line delay used by the <b>printer port</b> .
BAUD <code>BAUD</code>	<b>9600</b> 1200 2400 4800	<b>Baud Rate.</b> Selects the transmission speed for the printer port.
BITS <code>bits</code>	<b>8NONE</b> 7ODD 7EVEN 7SPACE	Selects number of data <b>bits</b> and parity of data transmitted from the printer <b>port</b> .
TERMINATION <code>Termin</code>	<b>CR/LF</b> CR	Selects the <b>termination character</b> for data sent from the printer port.
SERIAL PORT <code>Serial</code>	<b>OFF</b> EDP PRN	Selects the <b>serial port</b> used for continuous transmission.
STREAM DELAY <code>StreamDelay</code>	<b>250MS</b> 500MS 1SEC 2SEC 4SEC 8SEC 15SEC NONE	Specifies the <b>delay</b> in seconds or milliseconds inserted between <b>stream frames</b> .
DATA TRANSMISSION PORT <code>PrintEDP</code>	<b>EDP</b> PRN	Selects the <b>port for data transmission</b> when the PRINT key is pressed or the KPRINT EDP command is set.
PROTECT <code>Protect</code>	<b>ENABLE</b> DISABLE	<b>EDP port protection.</b> Select ENABLE to secure the EDP port.



### 3.5 PROGRAM Menu

P r o G r a m

Use this menu to configure the power-up mode, regulatory mode, and consecutive number values of this indicator.

The Program menu is shown below:

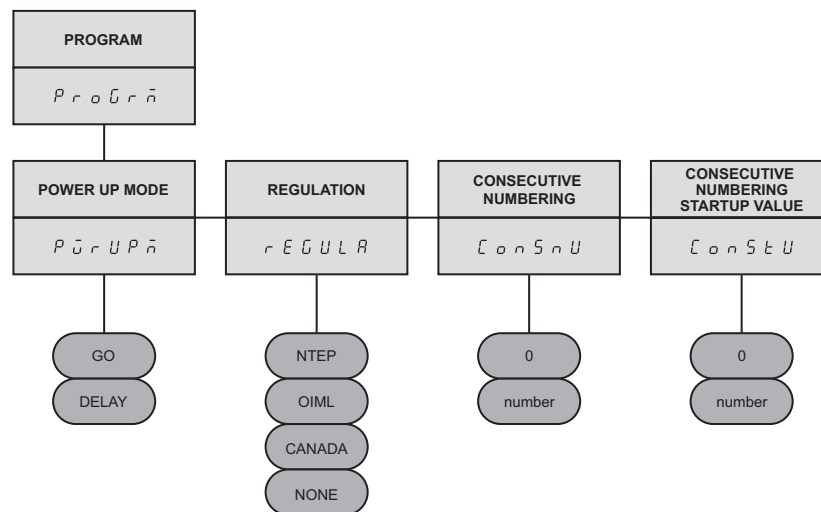


Figure 3–7: Program Menu

The following table describes the various program options (values in bold are default values).

Table 3–6: Program Options

Parameter	Options	Description
POWER UP MODE P ū r U P ā	<b>GO</b> DELAY	Power up mode. In GO mode, the indicator goes into operation immediately after a brief power up display test. In DELAY mode, the indicator performs the power up display test and enters a 60-second warm up period. Delay mode is terminated either at the end of the warm up period or when the predefined temperature is reached. If motion is not detected during the warm up period, it goes into Normal Mode.
REGULATION r E G U L A	<b>NTEP</b> OIML CANADA NONE	Specifies the regulatory agency having jurisdiction over the scale site.
CONSECUTIVE NUMBERING C o n S n U	<b>0</b> Number	Consecutive Numbering allows sequential numbering for print operations. This value is incremented following each print operation.
CONSECUTIVE NUMBERING STARTUP VALUE C o n S t U	<b>0</b> Number	Consecutive Number Startup Value specifies the initial consecutive number (CONSNU) value used when the indicator is powered on.

### 3.6 PRINT FORMAT Menu

*P F o r m a t*

Use these menu options to configure the print format settings.

The Print Format menu is shown below:

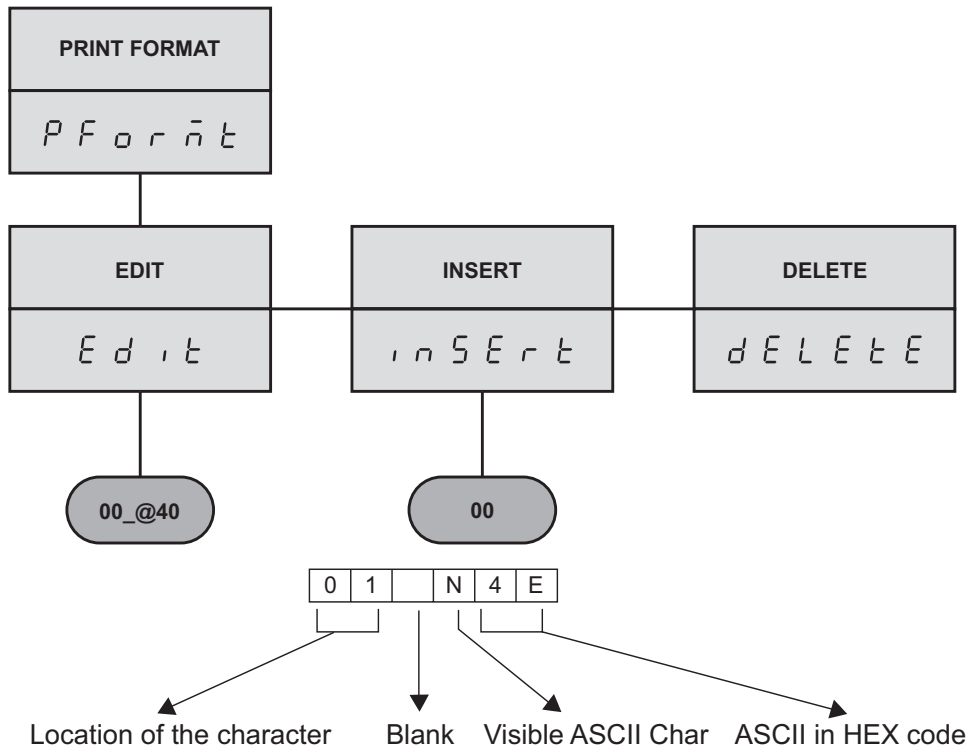


Figure 3–8: Print Format Menu

The following table describes the various print format options.

Table 3–7: Print Format Options

Parameter	Options	Description
EDIT <i>E d , t</i>	NONE	Edits the print format.
INSERT <i>i n S E r t</i>	NONE	Inserts a new character initialized to 00, at the end of the value edited using the previous EDIT option. This shifts all data after it to the right by one position. After insertion, the user can edit the value.
DELETE <i>d E L E t E</i>	NONE	Deletes the last character of the value edited by the previous EDIT option. This shifts all data after it to the left by one position.

### 3.7 TIME Menu

TIME

Use these menu options to configure time settings.

The Time menu is shown below:

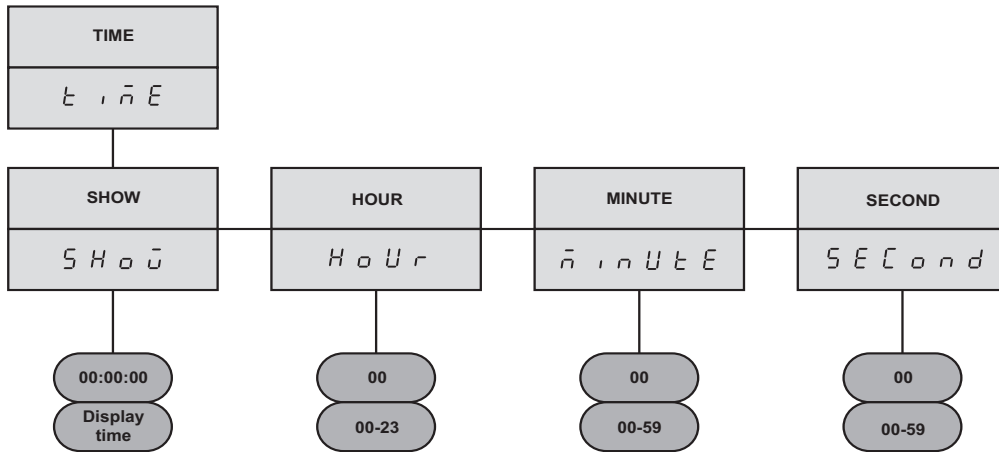


Figure 3-9: Time Menu

The following table describes the various time options.

Table 3-8: Time Options

Parameter	Options	Description
SHOW S H o ũ	HH.MM.SS	Displays current time in HH:MM:SS format
HOUR H o ũ r	hour (HH)	Set hour using 24 hour format
MINUTE n, i n ũ t e E	minute (MM)	Set minute
SECOND S E C o n d	second (SS)	Set second

### 3.8 DATE Menu

*d A t E*

Use these menu options to configure date settings.

The Date menu is shown below:

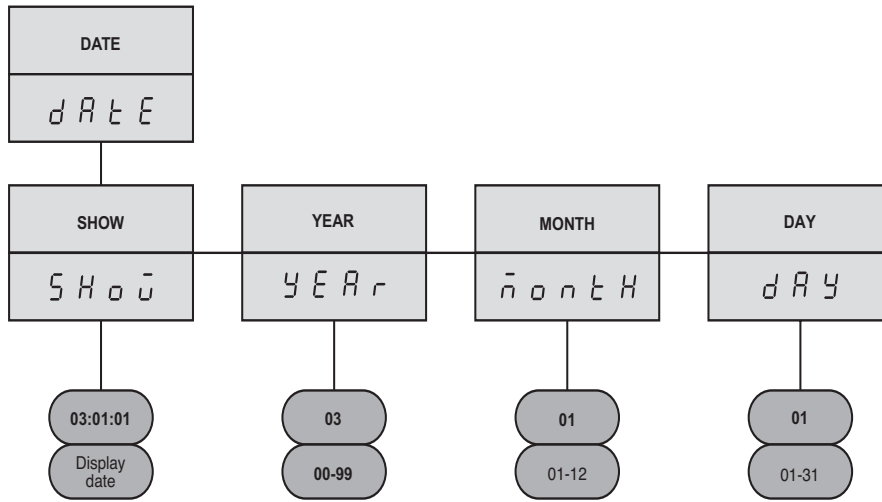


Figure 3–10: Date Menu

The following table describes the various date options.

Table 3–9: Date Options

Parameter	Options	Description
SHOW <i>S H o ũ</i>	YY.MM.DD	Displays current date in YY.MM.DD format
YEAR <i>Y E A r</i>	year (YY)	Set year (two digits 00-99)
MONTH <i>m o n t h</i>	month (MM)	Set month.
DAY <i>d A Y</i>	day (DD)	Set day.

### 3.9 VERSION Menu

*v E r S*

This shows the software version of this indicator.

The Version menu is shown below:

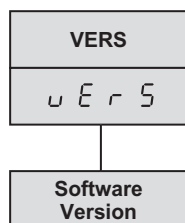


Figure 3–11: Version Menus

# CHAPTER 4 TEST MODE OPERATIONS

## TEST MODE OPERATIONS

A / D T S T

Use this mode to test the parameters of the weight indicator.

**Note: This operation is approved, only if performed by a certified technician.**

To enter test mode, press the “setup switch” for three seconds. The display will change from CONFIG to A/DTST.

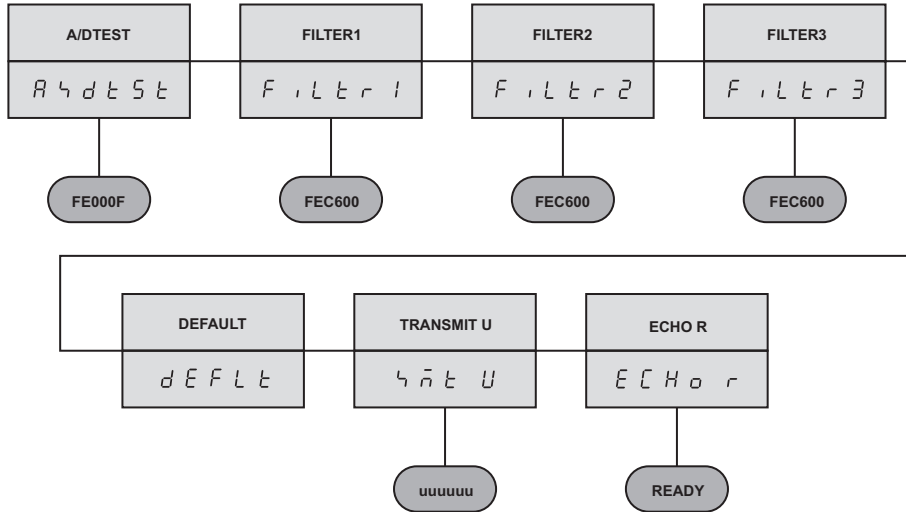


Figure 4-1: Test Mode Operations

Parameter	Description					
A/DTEST A / D T S T	Display A/D Test. Press and hold the Enter button to display the raw count value from A/D converter.					
FILTER1 F I L T E R 1 FILTER2 F I L T E R 2 FILTER3 F I L T E R 3	Display filtered raw count for digital filters 1~3. Press and hold the Enter button to show the status of DIGIN1 (DI1=HI or DI1=LO). Press and hold the Enter button to show the status of DIGIN2 (DI2=HI or DI2=LO). Press and hold the Enter button to show the status of DIGIN3 (DI3=HI or DI3=LO).					
DEFAULT d E F L T	Default parameters. Press the setup switch and the Enter button at the same time to reset configuration and calibration parameters to factory default values.					
TRANSMIT U U n t U	Transmit “U”. Press and hold the Enter button to send the U character [ASCII: 85 decimal, 55 hex] to test the serial line quality and integrity.					
ECHO R E C H O R	This displays the character received from the serial port to test the serial line quality. Press the down arrow once until the indicator displays “READY”. Now, press the enter button on the front panel. This displays the value received from serial port on the front panel. The format of the data displayed by the ECHO R command is shown as shown: <div style="text-align: center;"> <table border="1" style="margin: auto;"> <tr> <td>0</td> <td>1</td> <td>N</td> <td>4</td> <td>E</td> </tr> </table> <p style="text-align: center;"> <span style="margin-right: 100px;">↓</span> <span style="margin-right: 50px;">↓</span> <span style="margin-right: 50px;">↓</span> <span>↓</span> </p> <p style="text-align: center;">             Received character order    Blank    Visible ASCII Char    ASCII in HEX code           </p> </div>	0	1	N	4	E
0	1	N	4	E		

# CHAPTER 5 PANEL MODE OPERATIONS

## PANEL MODE OPERATIONS

Panel mode provides access to setting the time, date, and print serial numbers operation without the need to press the “Setup Switch”.

To enter Panel Mode, under normal mode press the “GROSS/NET” button for three seconds. The Panel Mode’s TIME menu is displayed.

The pictorial representation of the panel menu is as follows:

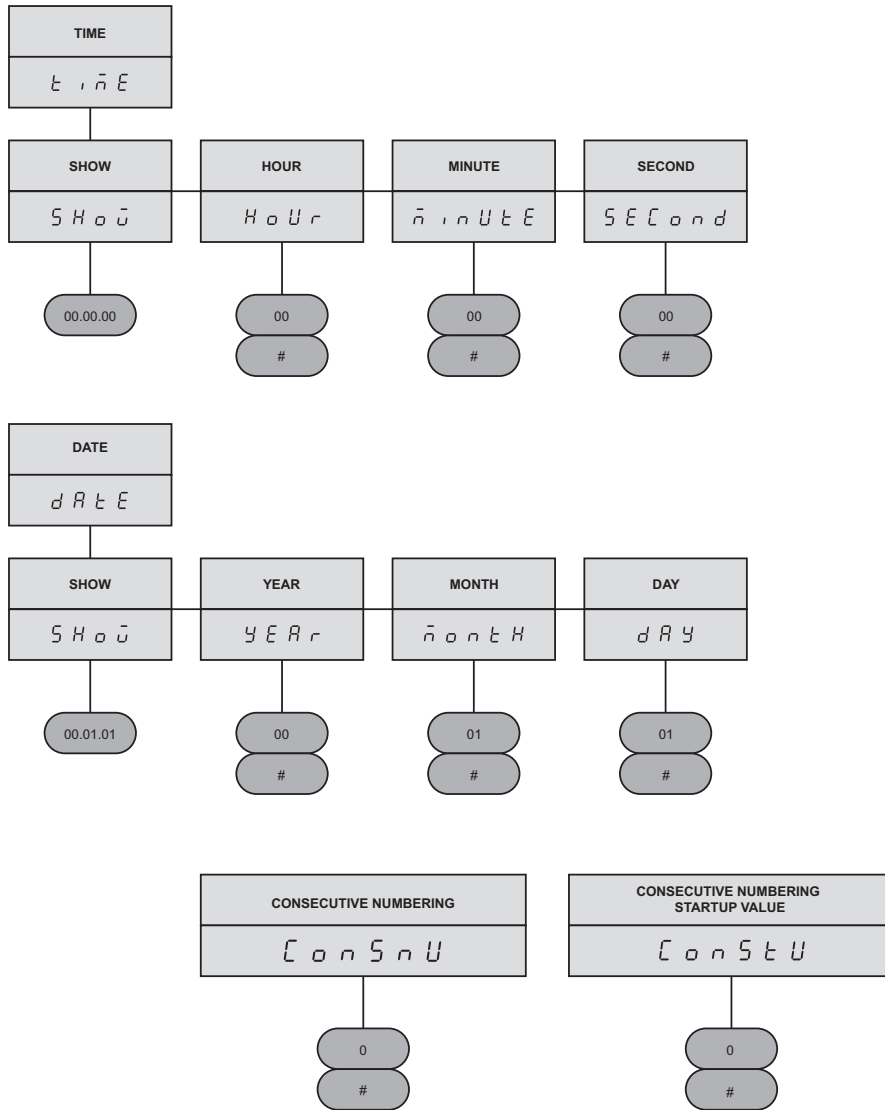


Figure 5-1: Panel Mode Operations

**Table 5–1: Panel Options**

Parameter	Options	Description
Time [Time]	—	Set the time.
SHOW [Show]	HH.MM.SS	Displays current time in HH:MM:SS format.
HOUR [Hour]	hour (HH)	Set hour using 24 hour format.
MINUTE [Minute]	minute (MM)	Set minute.
SECOND [Second]	second (SS)	Set second.
DATE [Date]	—	Set the date.
SHOW [Show]	YY.MM.DD	Displays current date in YY.MM.DD format.
YEAR [Year]	year (YY)	Set year (two digits 00-99)
MONTH [Month]	month (MM)	Set month.
DAY [Day]	day (DD)	Set day.
CONSECUTIVE NUMBERING [Consnu]	0 Number	Consecutive Numbering that allows sequential numbering for print operations. This value is incremented following each print operation.
CONSECUTIVE NUMBERING STARTUP VALUE [ConsstU]	0 Number	Consecutive Number Startup Value that specifies the initial consecutive number (CONSNU) value used when the indicator is powered on.

## CHAPTER 6 PRINT FORMATS

### 6.1 Print Format Commands

The following table gives the possible indicator parameters and command values that may be printed.

Command	Description
@G	Gross weight in displayed units. This also displays the weight units used.
@T	Tare weight in displayed units.
@N	Net weight in displayed units.
@C	Print consecutive number.
@Ln	New line, n specifies termination number.
@t	Time
@d	Date
@Sn	Space, n specifies the number of spaces.
@M	Use in pairs to quote Tare and Net data. If Tare is present, then the Tare and Net data will be printed on the ticket.
Gross, Net and Tare weights are 9 digits in length, including sign (10 digits with decimal point), followed by a space and a two-digit units identifier. The total field length with units identifier is 12 (or 13) characters.	
ID and consecutive number (CN) fields are 1-6 characters in length, as required.	

This section describes setting the print formats for the indicator, using the serial port or the front panel. There are two methods to edit the print format.

### 6.2 Edit Using Any Editor Through EDP

Write the print format data in pure text format. The following samples are for an Eltron LP 2742 printer.

```

Wwpf = 0
N
A0,0,0,3,1,2,N,"Vishay Transducers Ltd. @d @t @C" A8,50,0,5,1,1,N,"@G"
@MA8,120,0,5,1,1,N,"@T"
A8,190,0,5,1,1,N,"@N"@M
B8,260,0,3,3,7,100,B,"@G"
P1

```

First, place a "WWPF=0" in the first line to indicate that the following is a print format file. Place printer parameters in the beginning of each line as required, and then use double quotes to contain the text that you want to print on the ticket. Note in the above example, N, AxxxxN, B, and P1 are printer specific parameters for the Eltron LP 2742.

ASCII characters in HEX mode:

```

wpf=0
4E 0D 41 30 2C 30 2C 30 2C 33 2C 31 2C 32 2C 4E 2C 22 43 65 6C 74 72 6F 6E 20 54 65 63 68 6E 6F 6C 6F 67 69 65
73 20 49 6E 63 2E 20 40 64 20 40 74 20 40 43 22 0D 41 38 2C 35 30 2C 30 2C 35 2C 31 2C 31 2C 4E 2C 22 40 47 22 0D
40 4D 41 38 2C 31 32 30 2C 30 2C 35 2C 31 2C 31 2C 4E 2C 22 40 54 22 0D 41 38 2C 31 39 30 2C 30 2C 35 2C 31 2C
31 2C 4E 2C 22 40 4E 22 40 4D 0D 42 38 2C 32 36 30 2C 30 2C 33 2C 33 2C 37 2C 31 30 30 2C 42 2C 22 40 47 22 0D
50 31 0D

```

First, place "WPF=0" in the first line to indicate that the following is a print format file. Then place each character in ASCII HEX format and include a 0D for carriage return.

### 6.3 Use Front Panel Editing

The format of the characters to be entered is shown.

**Note: EDP or Electronic Data Processing refers to a PC or a terminal that can enter ASCII characters using a keyboard and a screen via the EDP interface of the VT 100.**

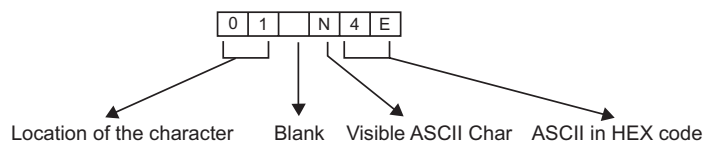


Figure 6-1: Print Format



## APPENDIX A ELECTRONIC DATA PROCESSING COMMANDS

The EDP port and commands may be used to set indicator parameters, retrieve indicator parameters, and set print formats.

To set parameter values, enter the corresponding EDP commands from the terminal. In order to set the parameter values, use the following format:

**“Command=Parameter Value”**

For example: To set GRADS (graduations) to 5000, do the following:

**grads=5000 (Press "Enter" on the keyboard)**

OK

OK: Indicates the setting has been saved.

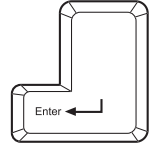
To retrieve parameter values, send the parameter name followed by “=” in ASCII code to the indicator.

For example: To retrieve the GRADS (graduations) value, do the following:

**grads= (Press "Enter" on the keyboard)**

5000.

The value of GRADS is returned as 5000.



### A.1 GENERAL Commands

Table A-1: General Commands

Command	Function
DUMPALL	List all parameter values
VERSION	Show VT 100 software version "VT 100 Vx.xxx"
P	Show currently displayed weight with unit

### A.2 CONFIGURATION Commands

Table A-2: CONFIG Commands

Command	Description	Values
PGA	ADC PGA	1, 2, 4, and 8
GRADS	Graduations	1 - 10000
ZTRKBND	Zero Track Band	OFF, 0.5D, 1D, and 3D
ZRANGE	Zero Range	1.9%, 100%
MOTBAND	Motion Band	OFF, 1D, 3D, 5D, 10D, 20D, and 50D
OVRLD	Over Load	FS+2%, FS+1D, FS+9D, and FS
SMPRAT	Sample Rate	3.75Hz, 7.5Hz, 15Hz, and 30Hz
DIGFLTR 1 DIGFLTR 2 DIGFLTR 3	Digital Filter 1 ~ 3	1, 2, 4, 8, 16, 32, 64, and 128
DFSENS	Digital Filter Cutout Sensitivity	1out, 2out, 4out, 8out, 16out, 32out, 64out, and 128out
DFTHRH	Digital Filter Cutout Threshold	NONE, 0.1DD, 0.2DD, 0.5DD, 1DD, 2DD, 5DD, 10DD, 20DD, 50DD, 100DD, 200DD, and 250DD
WVAL	Full scale value	1 - 999999

## A.3 FORMAT Commands

Table A-3: FORMAT Commands

Command	Description	Values
PRI.DECPNT	Primary units decimal point position	888888, 8.88888, 88.8888, 888.888, 8888.88, and 88888.8
PRI.DSPDIV	Primary units display division	1D, 2D, 5D, 10D, 20D, and 50D
PRI.UNITS	Primary units	KG, G
SEC.DECPNT	Secondary units decimal point position	888888, 8.88888, 88.8888, 888.888, 8888.88, and 88888.8
SEC.DSPDIV	Secondary units display division	1D, 2D, 5D, 10D, 20D, and 50D
SEC.UNITS	Secondary units	G, KG
SEC.MULT	Secondary multiplier	0.45359
DSPRAT	Display Rate	2500 ms, 500 ms, 750 ms, 1 sec, 1500 ms, 2 sec, 2500 ms, 3 sec, 4 sec, 6 sec, and 8 sec

## A.4 PROGRAM Commands

Table A-4: PROGRAM Commands

Command	Description	Values
PWRUPMD	Power up mode	GO, DELAY
REGULAT	Regulatory Compliance	NTEP, OIML, CANADA, NONE
CONSNUM	Consecutive number	0 - 999999
CONSTUP	Consecutive number start-up value	0 - 999999

## A.5 SERIAL Commands

Table A-5: SERIAL Commands

Command	Description	Values
EDP.BAUD	EDP port baud rate	300, 600, 1200, 2400, 4800, 9600, 19200, 38400
EDP.BITS	EDP port data bits/parity	8NONE, 7EVEN, 7ODD, and 7SPACE
EDP.TERMIN	EDP port termination character	CR/LF, CR
PRN.BAUD	Printer port baud rate	110, 300, 600, 1200, 2400, 4800, and 9600
PRN.BITS	Printer port data bits/parity	8NONE, 7EVEN, 7ODD, 7SPACE
PRN.TERMIN	Printer port termination character	CR/LF, CR
STREAM	Streaming port	OFF, EDP, PRN
STMDLY	Stream output delay period	250 ms, 500 ms, 1 sec, 2 sec, 4 sec, 8 sec, 15 sec, and None
PRNDEST	Print destination	PRN, EDP
PROTCT	Protection	DISABLE, ENABLE

## A.6 REGULATION

REGULATION sets the tare mode and the tare and zero commands affect the indicator operation, according to a selected weighing machine standard (NTEP, OIML, CANADA, NONE).

**Note: ZERO is active if the weight is within the Zero Range.**

**Table A-6: REGULATION**

REGULAT	Weight on Scale	Tare in System	Press TARE button	Press ZERO button
NTEP	No load	no	no action	ZERO
		yes	CLEAR TARE	
	positive	no	TARE	
		yes		
OIML	No load	no	no action	ZERO
		yes	CLEAR TARE	ZERO and CLEAR TARE
	positive	no	TARE	ZERO
		yes		ZERO and CLEAR TARE if weight is within ZRANGE. No action if weight is outside the ZRANGE.
CANADA	No load	no	no action	ZERO
		yes	CLEAR TARE	ZERO and CLEAR TARE if weight is within ZRANGE. No action if weight is outside the ZRANGE.
	positive	no	TARE	ZERO
		yes	no action	ZERO
NONE	No load	no	no action	ZERO
		yes	CLEAR TARE	
	positive	no	TARE	
		yes	CLEAR TARE	

## A.7 PRINT FORMAT Commands

**Table A-7: PFORMAT Commands**

Command	Description	Values
WWPF	Print format strings in visible ASCII characters	See "Print Formats" on page 24.
WPF	Print format strings in ASCII Hex code	See "Print Formats" on page 24.

## A.8 RESET Commands

**Table A-8: RESET Commands**

Command	Description	Values
DEFLT	Reset Default parameter values	—

## A.9 A/D Commands

Table A-9: ADS 1240 Commands

Command	Description	Values
ADS	Display Current 16 Registers of the ADC	—
ADSRESET	ADC reset	—
ADSSSELFAL	ADC self calibrate	—

## A.10 Key Button on EDP Commands

Table A-10: Key Button

Command	Description	Values
KGROSSNET	Same function as press Gross/Net Button	—
KZERO	Same function as press Zero Button	—
KTARE	Same function as press Tare Button	—
KUNITS	Same function as press Units Button	—
KPRINT	Same function as press Print Button	—

## A.11 Other Commands

Table A-11: Other Commands

Command	Description	Values
EE	Read EEPROM Contents	—
REZERO	Calibrate Rezero	—
WZERO	Calibrate Zero	—
WSPAN	Calibrate Span	—
RS	Software Reset	—
SFR	Read CPU's SFR Contents	—
IO	Read IO 4 Ports status	—
CONFIG	Enter Configure mode	—
TEST	Enter Test Mode	—
SETUP	Enter Setup Mode	—
CLREE	Clear all EEPROM data. (Note: all data is lost)	—

# APPENDIX B CONVERSION FACTORS AND CONTINUOUS OUTPUT FORMAT

## Conversion Factors


Secondary Unit = Primary Unit x Multiplier

**Table B-1: Conversion Factors**


Primary Unit	X Multiplier	Secondary Unit
grams	15.4324	grains
	0.03527	ounces
	0.00221	pounds
	000.001	kilograms
kilograms	15432.4	grains
	035.274	ounces
	001000	grams
	2.20462	pounds
	00.0011	metric tonnes

## COS Format

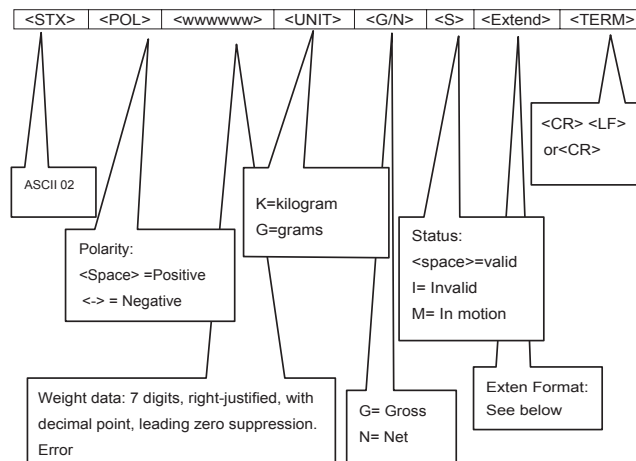Note: All values are ASCII code characters.



## Extended Format

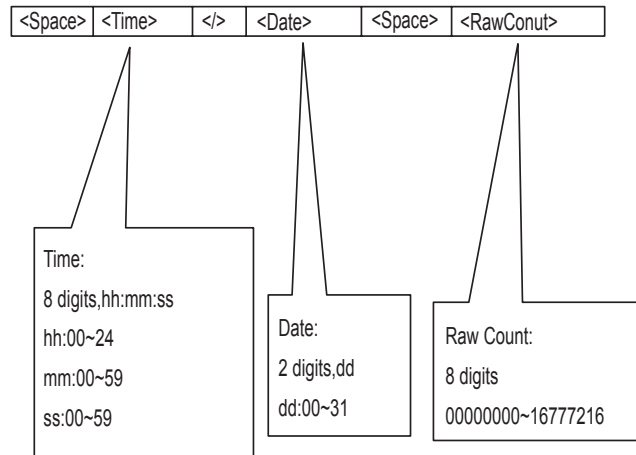

## APPENDIX C ASCII SET AND SPECIFICATIONS

### ASCII Character Set

Use the decimal values for ASCII characters listed in the table, when specifying print format strings on the VT 100 PFORMAT menu. The actual character printed depends on the character mapping used by the output device. The VT 100 can send and receive any ASCII character value (decimal 0-255) but the indicator display is limited to numbers, upper-case, unaccented letters, and a few special characters.

**Table D-1: Control Characters 0 ~ 31**

Control	ASCII	Dec	Hex	Control	ASCII	Dec	Hex
Ctrl-@	NUL	00	00	Ctrl-P	DLE	16	10
Ctrl-A	SOH	01	01	Ctrl-Q	DC1	17	11
Ctrl-B	STX	02	02	Ctrl-R	DC2	18	12
Ctrl-C	ETX	03	03	Ctrl-S	DC3	19	13
Ctrl-D	EOT	04	04	Ctrl-T	DC4	20	14
Ctrl-E	ENQ	05	05	Ctrl-U	NAK	21	15
Ctrl-F	ACK	06	06	Ctrl-V	SYN	22	16
Ctrl-G	BEL	07	07	Ctrl-W	ETB	23	17
Ctrl-H	BS	08	08	Ctrl-X	CAN	24	18
Ctrl-I	HT	09	09	Ctrl-Y	EM	25	19
Ctrl-J	LF	10	0A	Ctrl-Z	SUB	26	1A
Ctrl-K	VT	11	0B	Ctrl-[	ESC	27	1B
Ctrl-L	FF	12	0C	Ctrl-\	FS	28	1C
Ctrl-M	CR	13	0D	Ctrl-]	GS	29	1D
Ctrl-N	SO	14	0E	Ctrl-^	RS	30	1E
Ctrl-O	SI	15	0F	Ctrl- <u>_</u>	US	31	1F

**Table D-2: Characters 32 ~ 63**

ASCII	Dec	Hex	ASCII	Dec	Hex
SPACE	32	20	0	48	30
!	33	21	1	49	31
"	34	22	2	50	32
#	35	23	3	51	33
\$	36	24	4	52	34
%	37	25	5	53	35
&	38	26	6	54	36
'	39	27	7	55	37
(	40	28	8	56	38
)	41	29	9	57	39
*	42	2A	:	58	3A
+	43	2B	;	59	3B
,	44	2C	<	60	3C
-	45	2D	=	61	3D
.	46	2E	>	62	3E
/	47	2F	?	63	3F

**Table D-3: Characters 64 ~ 95**

ASCII	Dec	Hex	ASCII	Dec	Hex
@	64	40	P	80	50
A	65	41	Q	81	51
B	66	42	R	82	52
C	67	43	S	83	53
D	68	44	T	84	54
E	69	45	U	85	55
F	70	46	V	86	56
G	71	47	W	87	57
H	72	48	X	88	58
I	73	49	Y	89	59
J	74	4A	Z	90	5A
K	75	4B	[	91	5B
L	76	4C	\	92	5C
M	77	4D	]	93	5D
N	78	4E	^	94	5E
O	79	4F	_	95	5F

**Table D-4: Characters 96 ~ 127**

ASCII	Dec	Hex	ASCII	Dec	Hex
`	96	60	p	112	70
a	97	61	q	113	71
b	98	62	r	114	72
c	99	63	s	115	73
d	100	64	t	116	74
e	101	65	u	117	75
f	102	66	v	118	76
g	103	67	w	119	77
h	104	68	x	120	78
i	105	69	y	121	79
j	106	6A	z	122	7A
k	107	6B	{	123	7A
l	108	6C		124	7C
m	109	6D	}	125	7D
n	110	6E	~	126	7E
o	111	6F	DEL	127	7F

## APPENDIX D ERROR MESSAGES

### Error Message Table

The VT100 indicator displays a number of error messages. When an error occurs, the message is shown on the indicator LED display.

**Table E-1: Error Messages**

Error Message	Description	Solution
-----	Gross > Overload limit	Gross value exceeds overload limit. Check configuration or signal input level.
-----	Underflow error	Weight value too small to be displayed
~~~~~	Overflow error	Weight value too large to be displayed
AD LOW	A/D over negative range	Check scale for binding or damage
AD HI	A/D over positive range	Check scale for binding or damage
EE SUM	Parameter or calibration check-sum error	Recalibration is needed; contact Vishay service
EE WR	EEPROM write error	Contact Vishay service
PM SUM	Internal program checksum error	Contact Vishay service
HOFSET	Load > calibrated zero + capacity x INIZR	Check weight and INIZR
LOFSET	Load < calibrated zero + capacity x INIZR	Check weight and INIZR
UOFSET	Unstable within 2 sec of powering on	Check weight and INIZR
ERR xx	Other error, where xx is one of the following hex codes: <ul style="list-style-type: none"> <li>• b7 – Program Memory check sum error</li> <li>• b6 – EEPROM write error</li> <li>• b5 – EEPROM check sum error</li> <li>• b4b3b2b1b0:               <ol style="list-style-type: none"> <li>1 Raw A/D 0000000h</li> <li>2 Raw A/D 0ffffffh</li> <li>3 overload limited</li> <li>4 under -99999</li> <li>5 over 999999</li> <li>6 initial high offset</li> <li>7 initial low offset</li> <li>8 initial unstill</li> </ol> </li> </ul>	



## APPENDIX E FRONT PANEL DISPLAY CHARACTERS

### Character Map for Front Panel Display

The following figure shows the 7-segment LED character set used to display alphanumeric characters on the VT 100 front panel.

	-	9	E	Q
	.	:	F	R
	/	;	G	S
	0	<	H	T
%	1	=	I	U
&	2	>	J	V
'	3	?	K	W
(	4	@	L	X
)	5	A	M	Y
*	6	B	N	Z
+	7	C	O	[
,	8	D	P	\

Figure A-1: VT 100 Display Characters

---

## SPECIFICATIONS

---

### VT-100 Detailed Specifications

The following are the specifications of this product.

#### Performance

- Resolution:** 10,000 or 100,000 dd (setup selectable)
- Conversion Speed:** 3, 7, 15, 30 (setup selectable)
- Sensitivity:** 1.0 $\mu$ V/Vsi for approved scales; 0.5 $\mu$ V/Vsi for non-approved scales.
- Full Scale Range:** 3mV/V
- Linearity:** 0.01% of full scale
- Excitation:** +5VDC, with sense (6 wires)
- Number of Load Cells:** Up to 4, 350 load cells
- Offset Drift:**  $\leq$  3.5 ppm / $^{\circ}$ C
- Span Drift:**  $\leq$  3.5 ppm / $^{\circ}$ C
- A/D Converter Type:** Sigma-Delta, ratiometric.
- Filter:** Digital filter, 3 stages
- Count By:** x1, x2, x5, x10, x50
- Decimal point setting:** between any digits of the weight display
- Calibration Methods:** dead load and span, store in EEPROM
- Weighing Functions:**
  - Automatic zero tracking
  - No motion detection
  - Auto-zero on power-up
  - Zero
  - Tare
  - GROSS/Net
  - Print
  - Units conversion

#### Serial Communication

- Serial Output #1:** RS232
- Baud Rate:** 300 - 9600 baud, full duplex
- Applications:** Continuous output, printer output, PC interface
- Serial Output #2:** RS232 or 20mA current loop, output only
- Baud Rate:** 300 - 9600 baud
- Applications:** Printer port

#### Environmental

- Operating Temperature:** -10 $^{\circ}$ C to +40 $^{\circ}$ C (14 $^{\circ}$  to 104 $^{\circ}$  F)
- Storage Temperature:** -10 $^{\circ}$ C to +70 $^{\circ}$ C (14 $^{\circ}$  to 158 $^{\circ}$  F)
- Relative Humidity:** 40-90% RH, non condensing

#### Display and Keyboard

- Display:** 6 digit, 7-segment, LED, 20.3 mm
- Status annunciators:** No motion, zero, net, units used (kg, lb, g, oz)
- Weight Digits:** 4, 5 or 6 (setup selectable)
- Keyboard:** 5 key membrane keyboard, with tactile feedback

#### Electrical

- Voltage:** 12VDC, using power adaptor 115 or 230VAC
- Power:** 8W

#### Enclosure

- Heavy Gauge ABS**
- Dimensions:** 1863x103x95 mm (7.32"x4.05"x3.74") LxHxD
- Mounting:** Desktop, Wall and Tilt mount

#### Approvals

- NTEP certified per H-44 at 10,000d, OIML approval pending**
- Accuracy Class:** III

**Note:** Specifications subject to change without notice



---

## TECHNICAL SUPPORT

---

### Contacting Vishay Transducers

Americas	
Vishay Transducers United States 677 Arrow Grand Circle, Covina, CA 91722, USA PH: +1-600-722-0820; +1-626-331-0502 FAX: +1-626-332-3418 E-MAIL: vt.us@vishaymg.com	Vishay Transducers Canada 41 Homer Ave, Unit 5, Toronto, Ontario M8Z 4X4, Canada PH: +1-800-567-6098; +1-416-251-2554 FAX: +1-416-251-2690 E-MAIL: vt.can@vishaymg.com
Asia	
Vishay Transducers China No. 5 Binguan Nan Dao Youyi Rd., Hexi District, Tianjin China, Code 300061 PH: +86-22-2835-3503 FAX: +86-22-2835-7261 E-MAIL: vt.prc@vishaymg.com	Vishay Transducers Taiwan (Asia except China) 15 Fl, No. 86, Sec. 1 Shintai 5th Rd. Shijr City, Taipei, Taiwan, 221 PH: +886-2-2696-0168 FAX: +886-2-2696-4965 E-MAIL: vt.tw@vishaymg.com
Europe and the Middle East	
Vishay Transducers Germany Tatschenweg 1, 74078 Heilbronn, Germany PH: +49-7131-3901-260 FAX: +49-7131-3901-2666 E-MAIL: vt.de@vishaymg.com	Vishay Transducers France 16 Rue Francis Vovelle, 28000 Chartres, France PH: +33-2-37-33-31-20 FAX: +33-2-37-33-31-29 E-MAIL: vt.fr@vishaymg.com
Vishay Transducers Sweden P.O.Box 423, SE-691 27 Karlskoga, Sweden PH: +46-586-63000 FAX: +46-586-63099 E-MAIL: vt.se@vishaymg.com	Vishay Transducers Finland Jorvas Hitech Center, FI-02420 Jorvas Finland PH: +358-(0)9-8194-220 FAX: +358-(0)9-8194-2211 E-MAIL: vt.fi@vishaymg.com
Vishay Transducers UK Stroudley Road, Basingstoke, Hampshire RG24 8FW, United Kingdom PH: +44-125-646-2131 FAX: +44-125-646-1441 E-MAIL: vt.uk@vishaymg.com	Vishay Transducers Iberica C/Toronga 25, 1 C, 28043 Madrid, Spain PH: +34-91-721-8890 FAX: +34-91-721-9056 E-MAIL: vt.es@vishaymg.com
Vishay Transducers Norway Haarvard Marinsens vel 19, NO-0915 Oslo, Norway PH: +47-22-21-40-70 FAX: +47-22-21-92-10 E-MAIL: vt.no@vishaymg.com	Vishay Transducers Israel 5 Hazoran Street, P.O. Box 8381, New Industrial Zone, Netanya 42506, Israel PH: +972-9-863-8888 FAX: +972-9-863-8800 E-MAIL: vt.il@vishaymg.com